


Transom Harness Connections

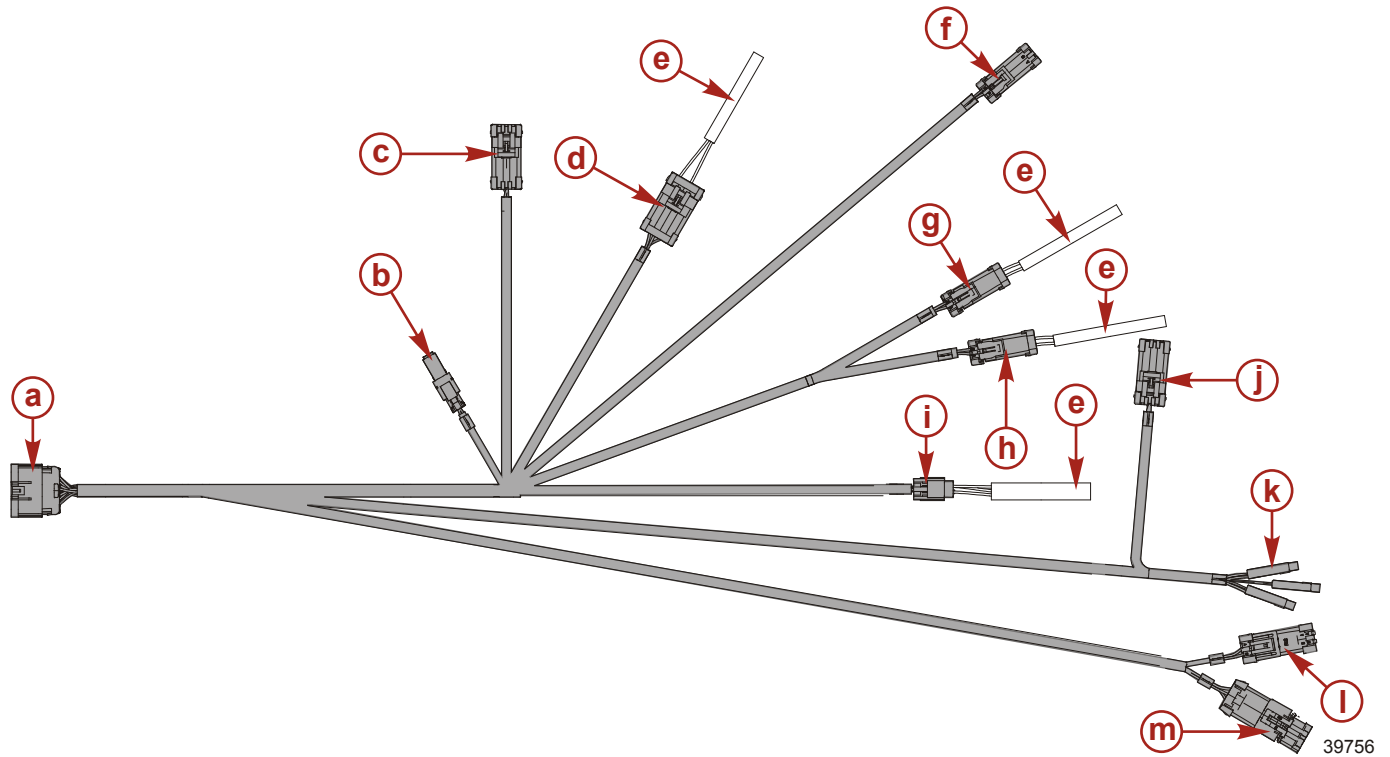

39756

- a** - 16-Pin Transom harness connector
- b** - Oil lube bottle
- c** - Trim position
- d** - Steering position
- e** - Resistor pack
- f** - MerCathode
- g** - Fuel level I
- h** - Fuel level II
- i** - Tab I & II
- j** - Trim pump
- k** - Trim switch
- l** - Shift position
- m** - Shift interrupt

NOTE: Driveline engine packages have the extension harnesses attached to the engine.

MerCathode

Connect the MerCathode connector at the inner transom to the transom harness connector labeled MerCathode.

Trim Position

Connect the trim position connector at the inner transom to the transom harness connector labeled Trim Position.

Steering Position

Connect the steering position connector at the inner transom to the transom harness connector labeled Steering Position.

Oil Lube Bottle

Connect the oil lube adaptor harness to the lube bottle and to the connector labeled Oil Lube Bottle.

Tab Position

Connect the tab position adaptor harness to the transom harness connector labeled Tab Position.

Fuel Level

Connect the fuel tank adaptor harnesses to the transom harness connector labeled Fuel Level I and Fuel Level II.